



Flat Marker Installation Instructions:





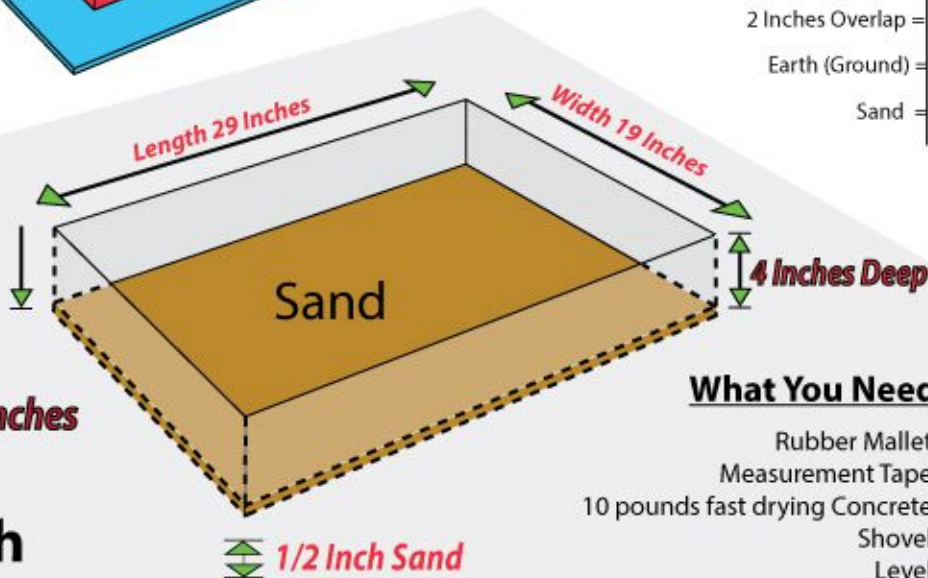


Illustration Legend:

Nameplate =	
Stained Glass =	
Flat Marker =	
2 Inches Overlap =	
Earth (Ground) =	
Sand =	

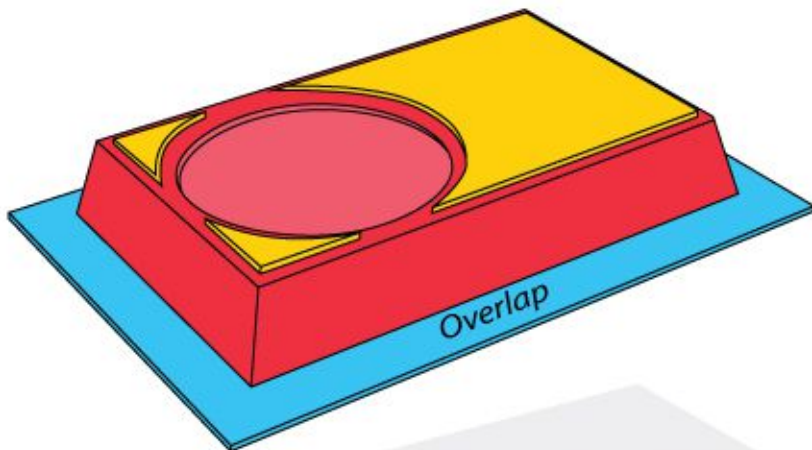

What You Need:

- Rubber Mallet -
- Measurement Tape -
- 10 pounds fast drying Concrete -
- Shovel -
- Level -

Step 1

- Excavate **4 1/2 Inches** deep into the earth. The dimensions are **29 Long x 19 Inches Wide**. You can use the Flat Marker as a template, but add **1 Inches** around the overlap.

* It is better to remove more soil than less.




- Fill about **1/2 Inch** of sand into the empty space, and distribute evenly across. Check the height of 4 inches at different places.



GIVE YOUR LOVED ONES THE ETERNAL TRIBUTE THEY DESERVE

Flat Marker Installation Instructions:

2 Inches Overlap	
Earth, Soil, Ground	
Sand	
Nameplate	
Stained Glass	
Flat Marker	
Concrete	

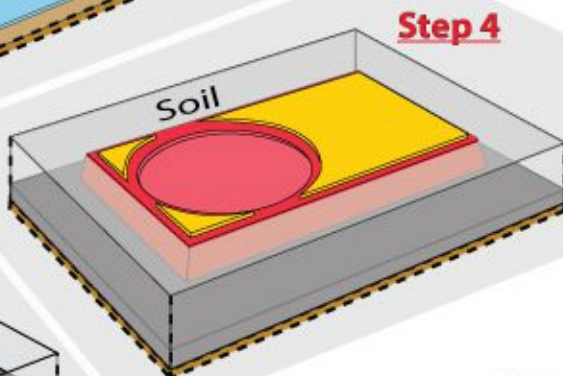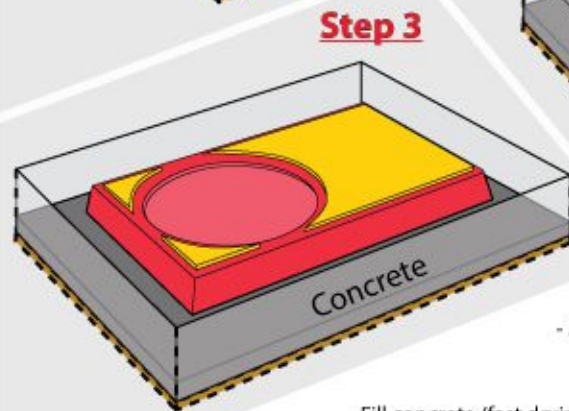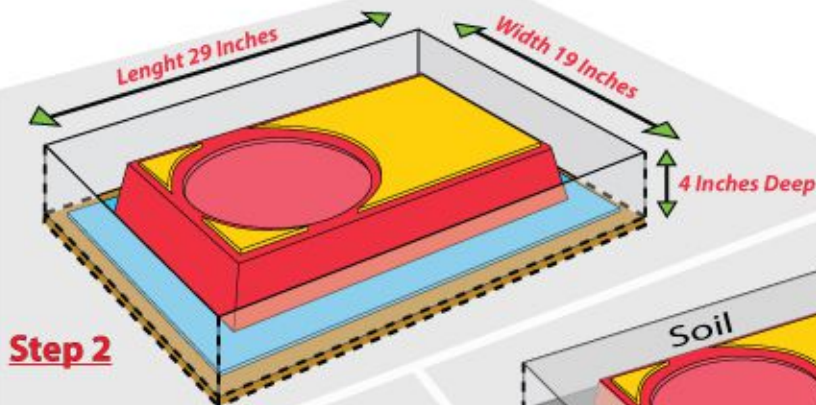

Step 2


- Lower Flat Marker into ground.
- Press firmly into ground and level with a rubber mallet.
- Make sure the Flat Marker is even with the above ground.

Step 3

- Fill concrete (fast drying) 2 inches high into the empty space, then allow to dry.

Step 4

- Fill the rest of the empty space with soil, until you see the rim of the Flat Marker.

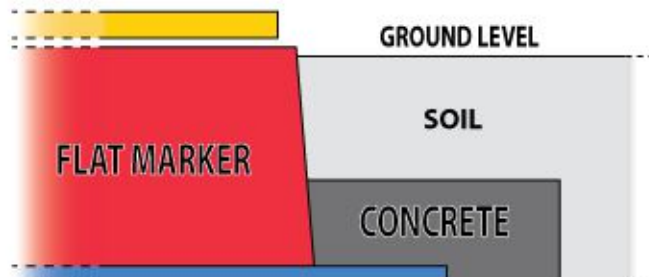

Allow the Flat Marker a clearance of 1/2 - 1 inch above ground.


In case of doubt, talk to the cemetery about the height of their lawn cutting.

MILLENNIUM HEADSTONES


GIVE YOUR LOVED ONES THE ETERNAL TRIBUTE THEY DESERVE

24 Inches Long Flat Marker Measurements (Lowered Option)


TOP

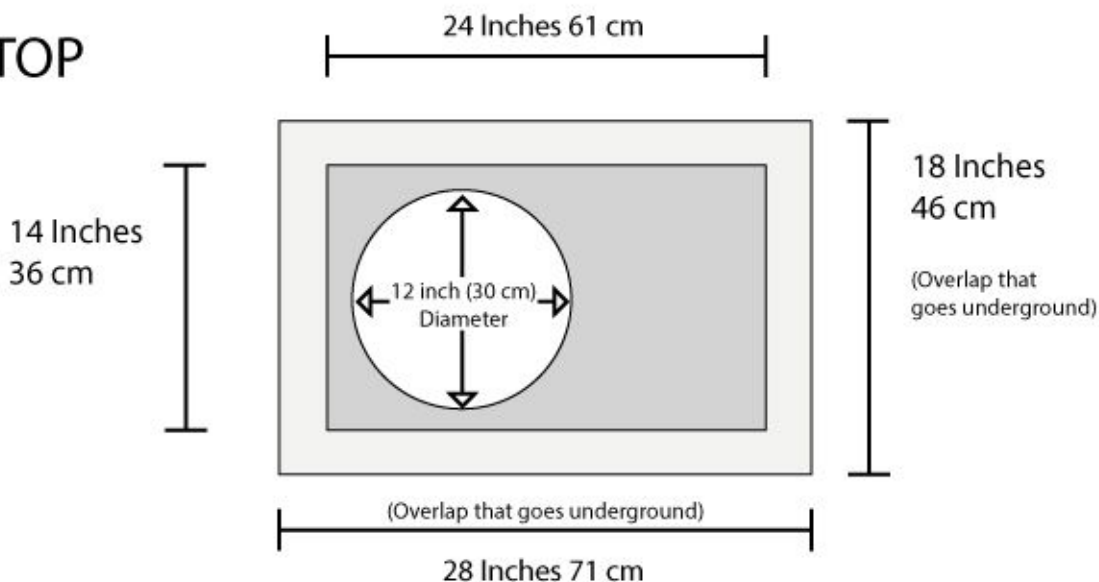

FRONT

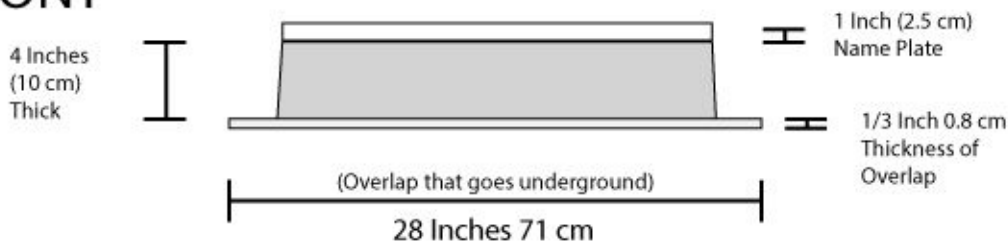

SIDE

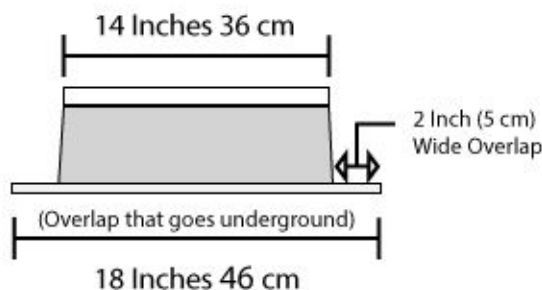





GIVE YOUR LOVED ONES THE ETERNAL TRIBUTE THEY DESERVE

24 Inches Long Flat Marker Measurements (Raised Option)

TOP

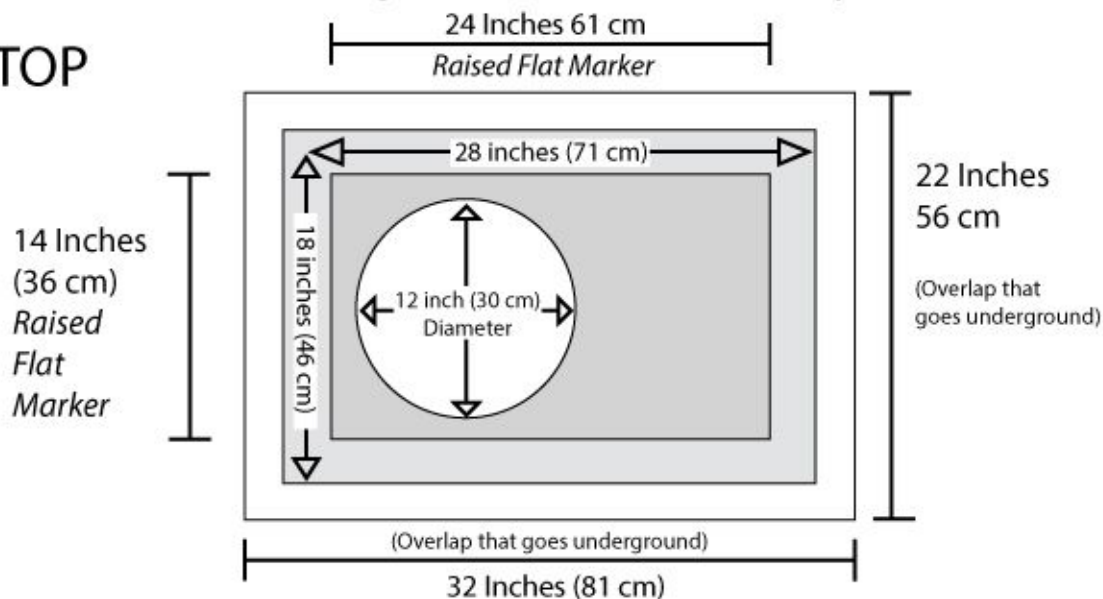

FRONT

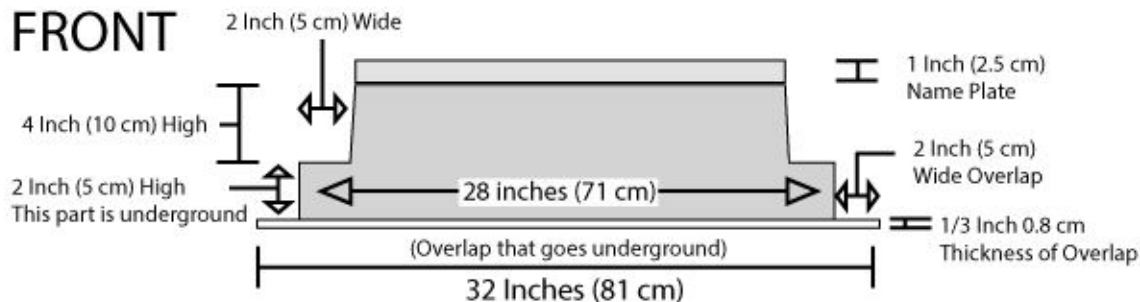

SIDE

