



## Upright Headstone Installation Instructions:



### What you need:




#### **Supplied:**

- Foam Glue  
(Brand Gorilla, or similar)
- Template

#### **Required:**

- 2 x Metal Rods  
(Rebar) 6-7 Feet Long  
(Longer if the ground is soft.)
- Shovel
- Rubber Mallet
- Level
- Tape Measurement

Nameplate	
Stained Glass	
Flat Marker	
Template, Supplied	
Earth, Ground To Dig out	
1/2 Inch Sand to Fill in	

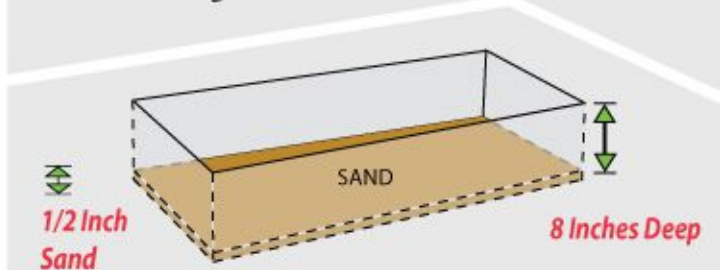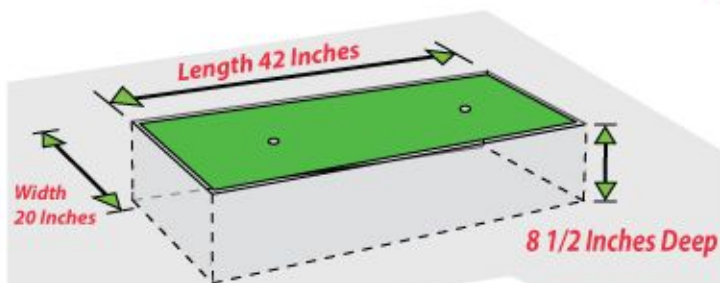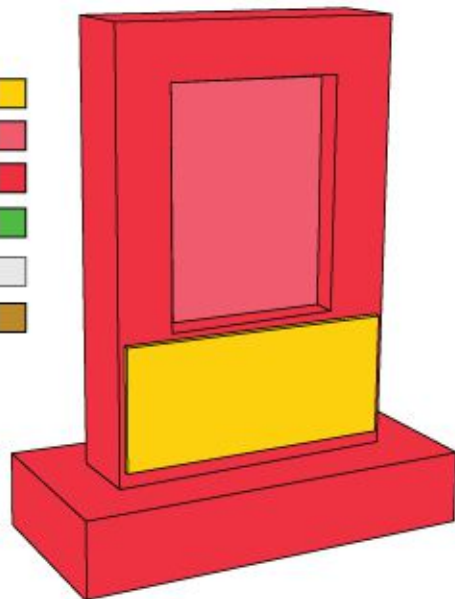

### Step 1

Lay on the ground the supplied Template, and add around the template 1/4 inch of space, just enough for a tight fit, while excavating 8 1/2 Inches deep into the ground.


### Step 2

Fill 1/2 Inch Sand in the bottom of the excavated opening. Measure the height of the Sand at different places to make sure it is even leveled 8 inches deep.



GIVE YOUR LOVED ONES THE ETERNAL TRIBUTE THEY DESERVE

### Upright Headstone Installation Instructions:

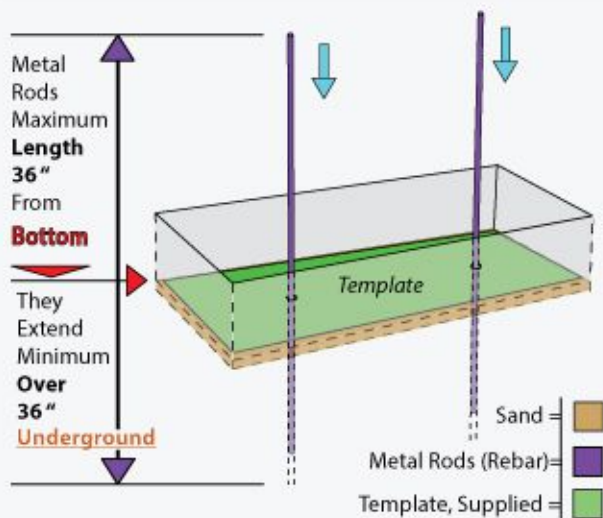


#### Step 3

- Put the Template onto the ground


- Insert the Metal Rods (Rebar) 6 to 7 (\*) feet thru the holes on the Template, then using a 5 Pound Hammer drive the Metal Rods into the ground, until they are less than 36 Inches high sticking out from the bottom.

\* If the soil is soft the Metal Rods (Rebar) have to be longer than 36" in the ground. (Total length 7 feet long)

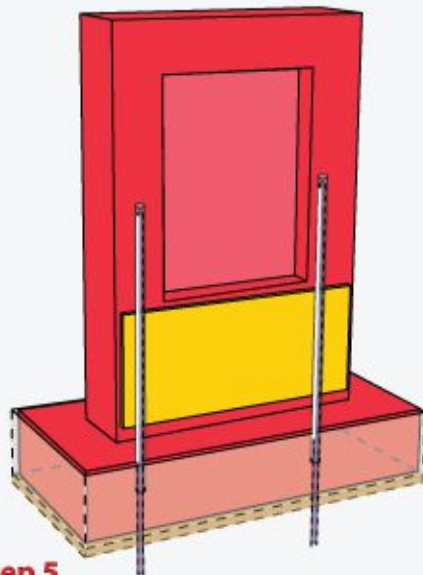

#### Step 5

Use the Rubber Mallet on the headstone base to level it with the ground. Make sure that the Headstone base is level with (above) ground.

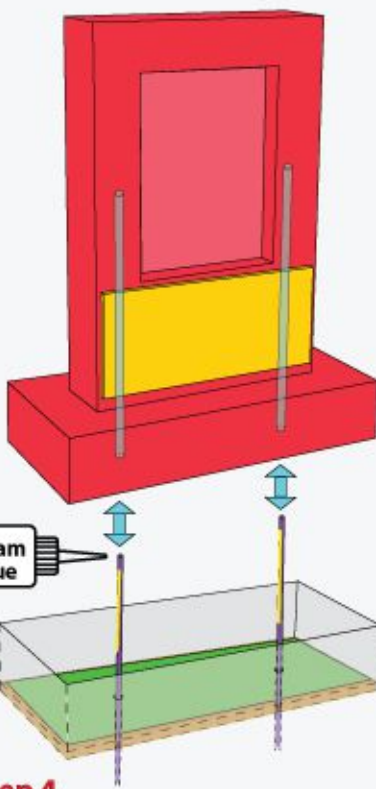

#### Step 4

Use Foam Glue (supplied) on the Metal Rods (Rebar), but leave about 2 inch on top empty. Then guide the metal rods into the tubing inside the headstone, and slide it on, while lowering the headstone into the ground



GIVE YOUR LOVED ONES THE ETERNAL TRIBUTE THEY DESERVE

## 45 Inches High Headstone Measurements

